

Cup Size Adjustment Guide




WARNING: The paper cups shown below are not supported and may prevent the machine from dispensing cups correctly.




Setup

Remove the 8 screws highlighted in the image below.

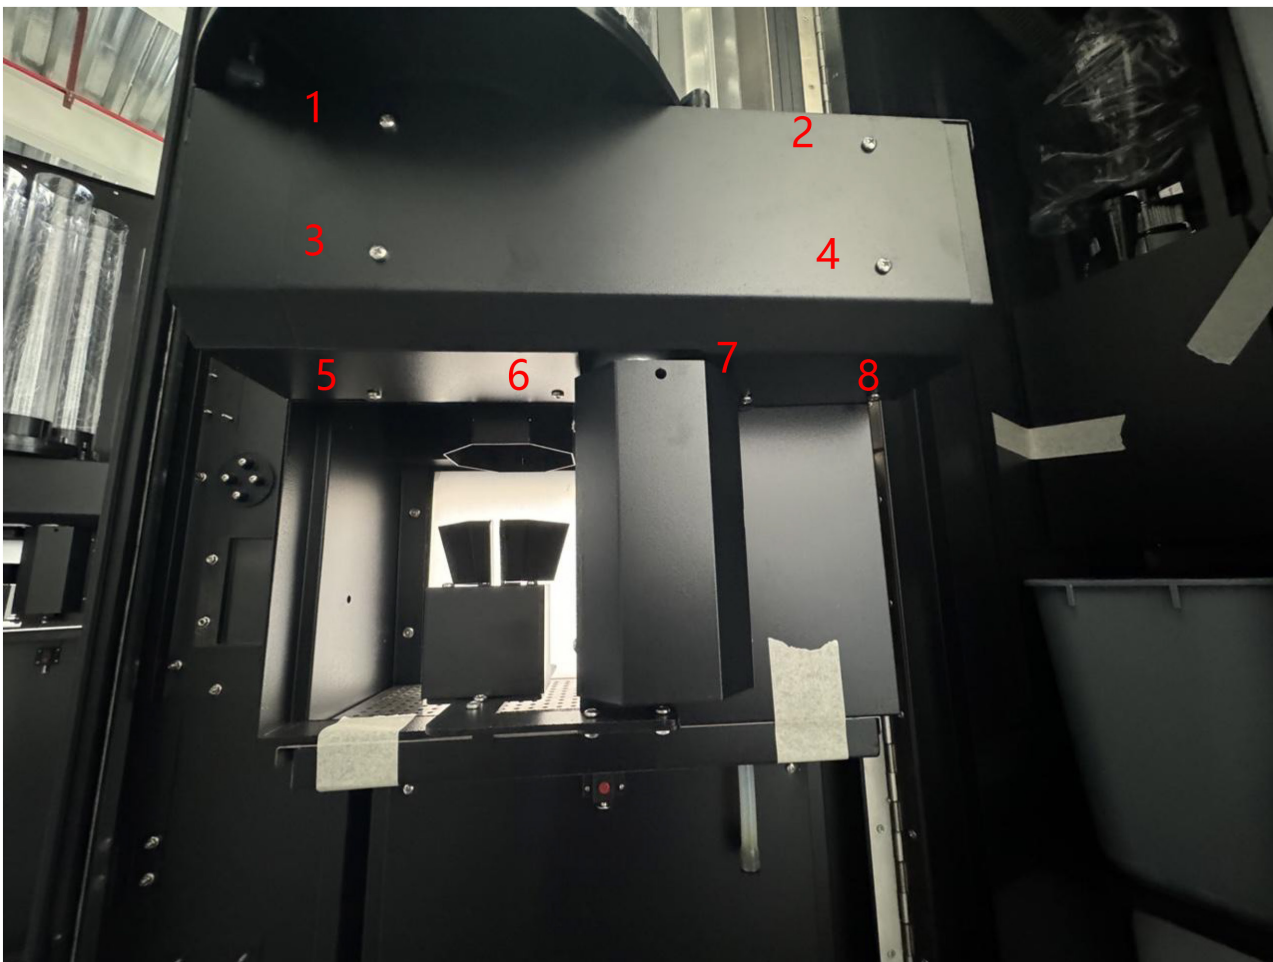



The built-in metal fixing plate includes three hole positions for 70 mm (8 oz), 80 mm (12 oz), and 90 mm (16 oz) paper cups. Remove and reposition the plate to adjust the cup sizes.

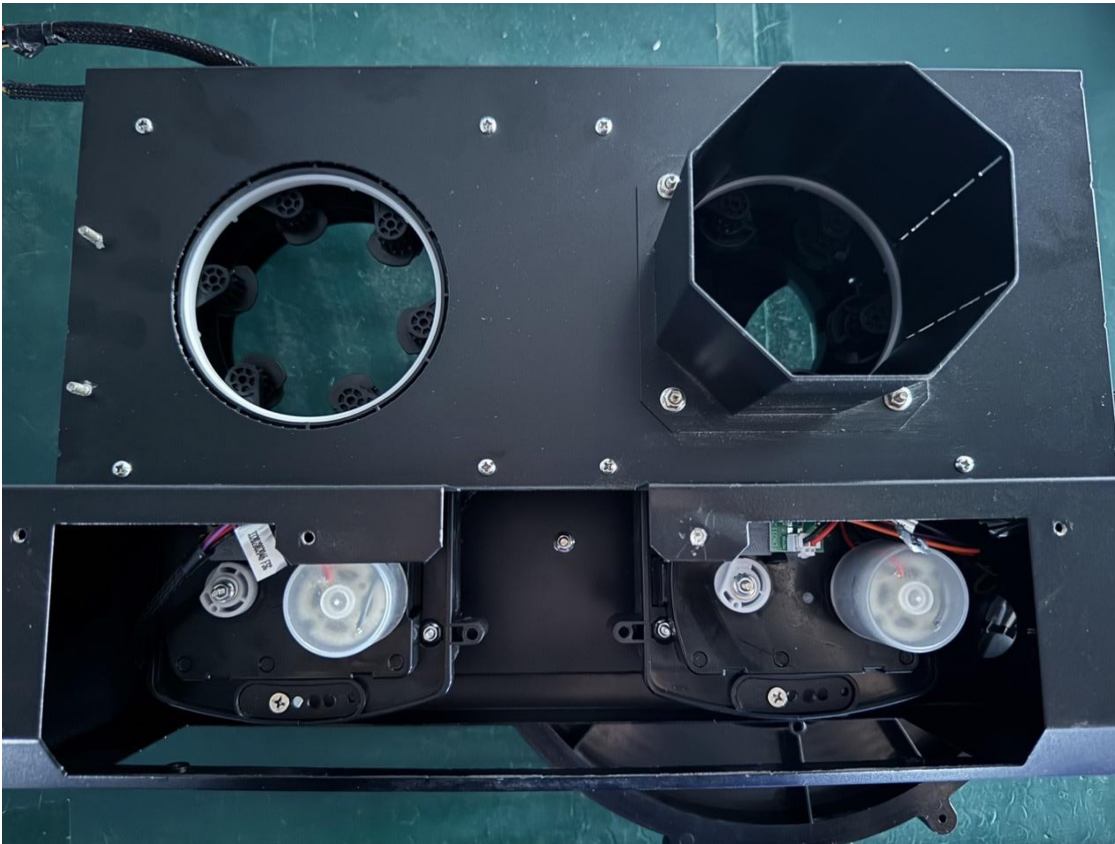



Default cup sizes: 70 mm (8 oz), 80 mm (12 oz), and 90 mm (16 oz) as shown below.




To change the cup diameter, adjust the lever to increase or decrease the size of the left and right cups, as shown below.

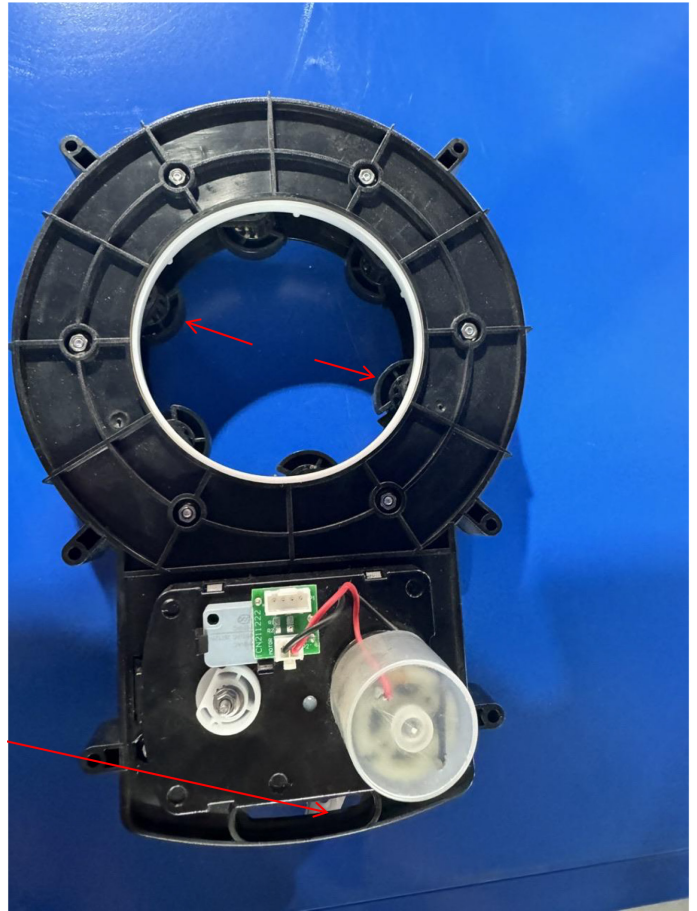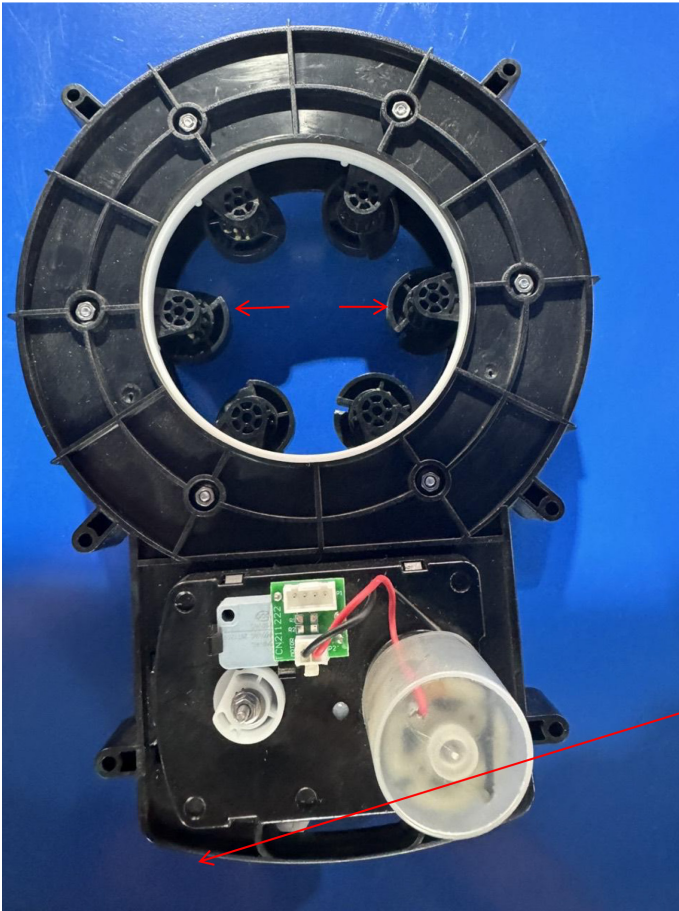

Adjust the cup edge to align with the six wheels that hold it in place, refer to the images below.

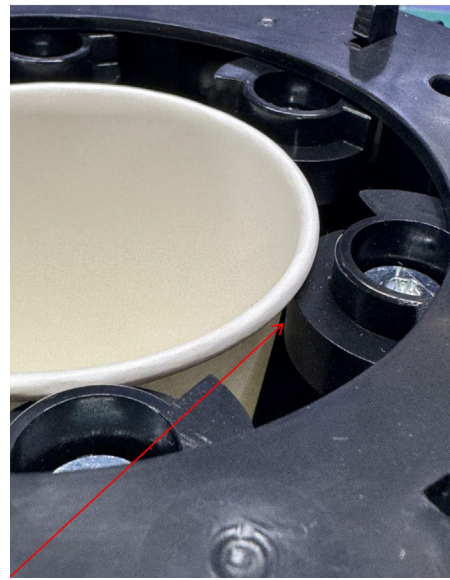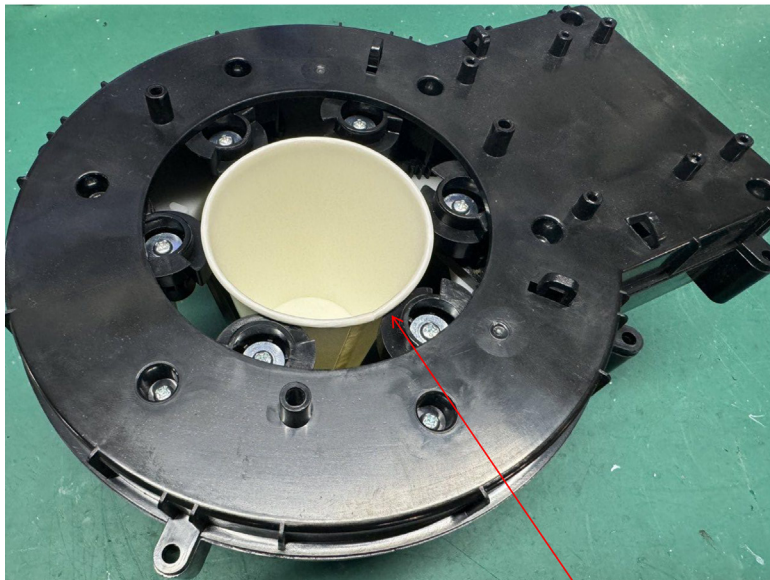

Ensure the cup wheels are positioned close to the cup edge to keep the cup securely in place.

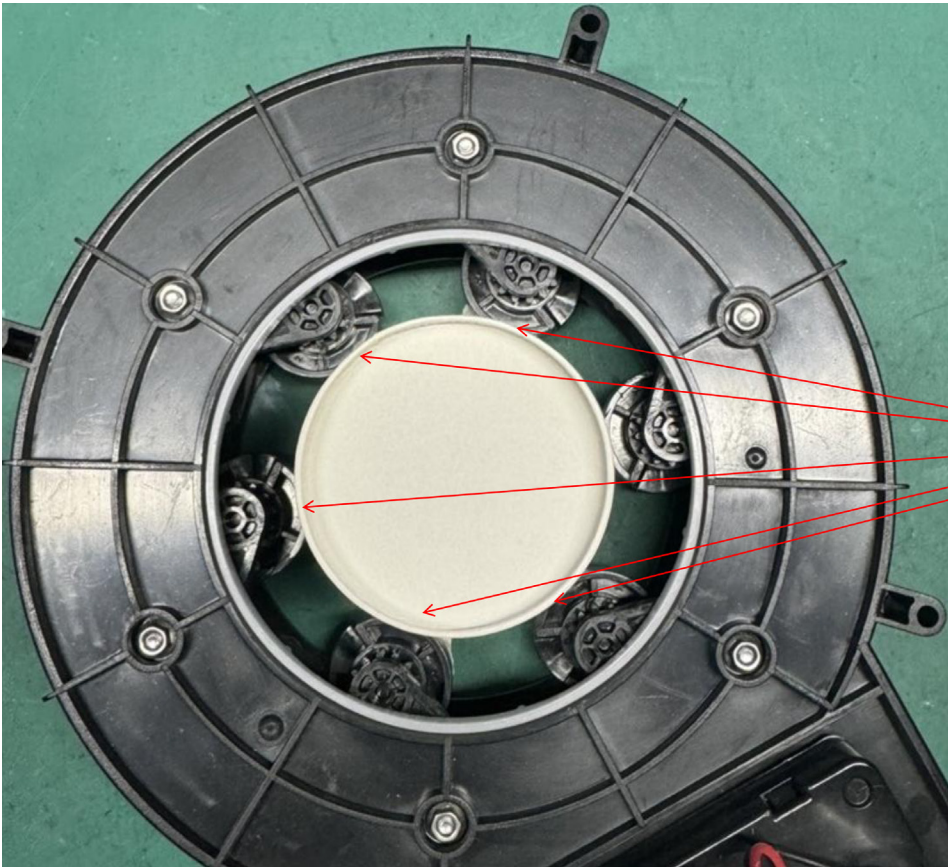

Align the cup edge tightly against the cup wheels.

